



PLEASE NOTE THAT WE HAVE INSTALL VIDEOS FOR MANY MODELS ON GOOGLE VIDEO AND YOUTUBE.COM. SEARCH UNDER "WIND DEFLECTOR"

Wind Deflector Mustang 2005 to 07 Installation Guide

START BY PUTTING YOUR TOP DOWN

STEP 1: WHEN YOUR WIND DEFLECTOR WAS SHIPPED TO YOU THE FRONT BRACKETS HAD TO BE LOWERED TO FIT IN THE BOX. YOU NEED TO REMOVE THE TOP TWO SCREWS. DO NOT REMOVE THE BOTTOM SCREW



HAVE A FRIEND HELP YOU INSTALL THE WIND DEFLECTOR THE FIRST COUPLE OF TIMES. AFTER THAT YOU WILL BE ABLE TO PUT IT IN AND OUT BY YOURSELF IN MINUTES.

STEP 1 CONT: SWING THE TOP BRACKET INTO THE "UP" POSITION AND THEN REPLACE THE SCREWS USING A #2 PHILIPS, (THIS IS A VERY COMMON SCREW DRIVER AND THE END OF THE SCREW DRIVE LOOKS LIKE AN "X"). YOU WILL ONLY NEED TO DO THIS ONCE. REPEAT TO THE OTHER SIDE



LOVE THE DRIVE COPYRIGHT 2007, WWW.LOVETHEDRIVE.COM.COM PRINTED IN CANADA PAGE 1

STEP 2: REMOVE THE FOUR STRAPS ATTACHED TO THE WIND DEFLECTOR. THERE ARE TWO STRAPS WITH BLACK SNAP HOOKS AND TWO WITH SILVER HOOKS.



NEXT WE ARE GOING TO INSTALL THE WIND DEFLECTOR. LEAVE THE WIND DEFLECTOR IN THE CLOSED POSITION. IT WILL LOOK LIKE THE PHOTO ONCE INSTALLED.

STEP 3: STAND ON THE SIDE OF YOUR CAR SO YOU ARE IN LINE WITH THE BACK SEAT. FRIEND CAN STAND ON THE OTHER SIDE TO HELP



STEP 3: START BY HOLDING THE WIND DEFLECTOR ON EACH SIDE, BELOW THE SUPPORT ROD. LOWER THE WIND DEFLECTOR SO IT IS FLAT (PARALLEL WITH) IN THE BACK SEAT.



STEP 3 CONT: THE FRONT BRACKETS ENTER THE SPACE BEHIND THE SEAT BELT. THE BRACKETS ARE DESIGNED NOT TO INTERFERE WITH THE SEAT BELT.




STEP 3 CONT: INSERT THE FRONT BRACKET ON THE OPPOSITE SIDE ON WHICH YOU ARE STANDING (IF YOU ARE STANDING ON THE DRIVERS SIDE START WITH THE BRACKET ON THE PASSENGER SIDE) THEN PLACE THE BRACKET INTO THE HOLE ON YOUR SIDE. REMEMBER TO CONTINUE HOLDING THE BACK OF THE WIND DEFLECTOR.



PAGE 2

STEP 4: THE BACK BRACKETS ATTACH TO THE SIDE TRIM PANELS. CONTINUE TO HOLD THE BACK OF THE WIND DEFLECTOR WITH ONE HAND AND USE THE OTHER TO REACH DOWN AND PULL THE BLACK HOOK BRACKET UP.

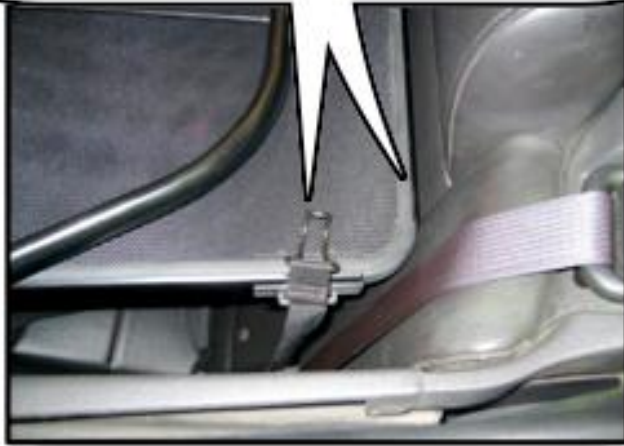

STEP 4 CONT: THEN PLACE THE BLACK HOOK ON THE QUARTER TRIM PANEL. REPEAT ON THE OTHER SIDE. THE WIND DEFLECTOR IS DESIGNED NOT TO TOUCH YOUR BACK SEAT



STEP 5: NOW ATTACH THE TWO BLACK SNAP HOOKS TO THE BABY SEAT ANCHORS. THERE ARE FOUR OF THESE ANCHORS IN THE BACK SEAT. ATTACH TO THE SNAP HOOKS TO MIDDLE ANCHORS BY THE SEAT BELT BUCKLES



STEP 5 CONT: THE BLACK SNAP HOOKS ARE INSERTED WITH THE SNAP FACING DOWN. SLIDE THE BLACK SNAP HOOK INTO THE HOLE AND PRESS DOWN AND THEN BACK TO ATTACH TO THE ANCHOR.



STEP 6: THE FRONT SILVER HOOK STRAPS ATTACH TO THE BOTTOM OF THE TRIM PANEL RIGHT BELOW THE BACK SEAT. ATTACH THE SILVER HOOKS ON BOTH SIDES



STEP 6 CONT: NEXT WE ATTACH THE FOUR STRAPS. THE TWO BLACK SNAP HOOKS ATTACH TO THE BACK BRACKETS (BLACK HOOKS ON TRIM PANEL). THE TWO SILVER HOOKS ATTACH TO THE BUCKLE UNDER THE FRONT BRACKETS



STEP 6 CONT: ONCE YOU HAVE ATTACHED ALL FOUR BUCKLES NOW GO BACK AND TIGHTEN THE STRAPS BY PULLING DOWN ON THE STRAPS (PULL UNTIL THE STRAP IS TIGHT). NOW TO REMOVE THE WIND DEFLECTOR YOU CAN JUST UNDO THE BUCKLES AND LEAVE THE STRAPS IN PLACE



STEP 7: YOUR WIND DEFLECTOR FITS IN THE TRUNK WHEN NOT IN USE. HOWEVER MAKE SURE THAT YOU INSERT THE WIND DEFLECTOR WITH THE FRONT BRACKETS FACING OUT



STEP 7 CONT: IF YOU TRY TO PUT THE WIND DEFLECTOR WITH THE FRONT BRACKETS FACING TOWARDS THE FRONT OF THE CAR IT WILL NOT FIT AND IF IT DOES IT WILL BE VERY DIFFICULT TO REMOVE



STEP 7 CONT: I HAVE SHOWN THE WITH DEFLECTOR IN THE TRUNK WITH OUT THE STORAGE BAG TO HIGHLIGHT THAT YOU NEED TO MAKE SURE THE FRONT BRACKETS ARE FACING THE REAR OF THE CAR. ALWAYS USE YOU STORAGE BAG WHEN PUTTING THE WIND DEFLECTOR IN THE TRUNK OR STORAGE

REMEMBER, IF THESE INSTRUCTIONS ARE NOT CLEAR HAVE A LOOK AT OUR INSTALL GUILDE FOR 2005 + MUSTANGS AT GOOGLE VIDEO OR YOUTUBE.COM OR GIVE US A CALL WE ARE HERE TO HELP



NOW YOU ARE READY TO LOVE THE DRIVE! WWW.LOVETHEDRIVE.COM

PAGE 4