




PLEASE NOTE THAT WE HAVE A NUMBER OF MODELS WITH INSTALL VIDEOS ON GOOGLE VIDEO. SEARCH UNDER "WIND DEFLECTOR"

# WIND DEFLECTOR SOLARA 1999 TO 2003

WHEN YOU STORE WIND DEFLECTOR IN THE TRUNK, PULL THE SIDE REAR BRACKETS BACK AND TIGHTEN THE THUMBSCREWS.




TO INSTALL THE WIND DEFLECTOR START BY LOOSING THE THUMB SCREWS (ONE COMPLETE TURN) AND PUSHING BRACKET OUT. TIGHTEN ONE THUMBSCREW LOOSELY. REPEAT ON OTHER SIDE.

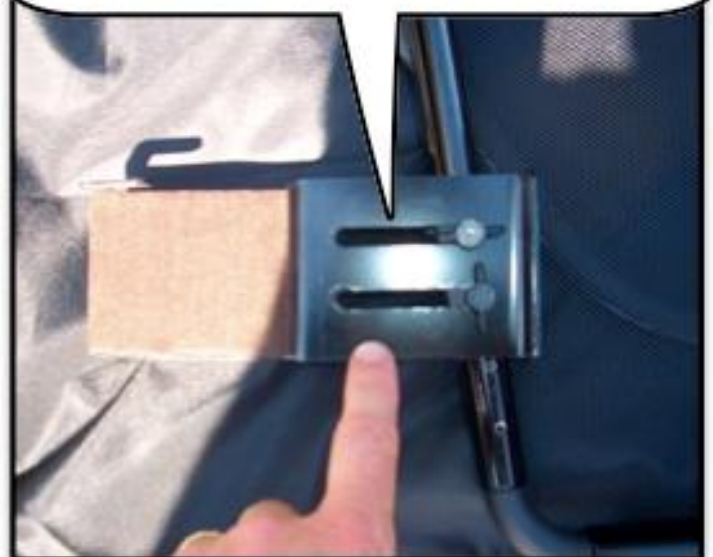

ONCE IN PLACE YOUR WIND DEFLECTOR WILL REST ON THE TRIM PANEL AND LOCK INTO THE SLOTS ON THE SIDE OF THE TRIM PANEL




START BY PLACING THE REAR BRACKET ON THE OPPOSITE SIDE, TO WHICH YOU ARE STANDING, INTO THE HOLE ON THE TRIM PANEL

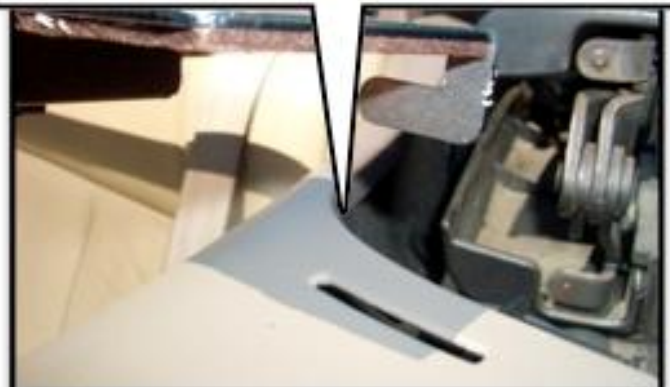

THEN ADJUST THE BRACKET ON YOUR SIDE INTO THE HOLE. LOWER THE WIND DEFLECTOR INTO PLACE



NEXT ADJUST THE REAR BRACKETS BY PULLING THE BRACKET BACK AND LOCKING THE WIND DEFLECTOR INTO PLACE BY TIGHTENING THE TWO THUMB SCREWS. REPEAT ON OTHER SIDE.

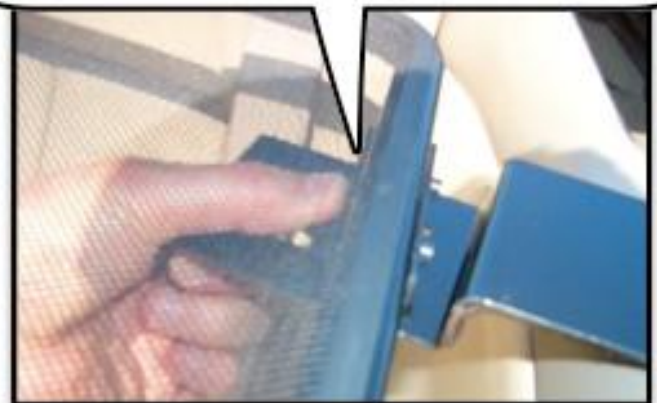

THE LAST STEP IS ATTACH THE TWO FRONT STRAPS. THE STRAPS HOOK TO THE BOTTOM TRIM PANEL JUST IN FRONT OF THE BOTTOM OF THE REAR SEAT



THE STRAPS ATTACH TO THE BUCKLES ON THE BOTTOM OF THE WIND DEFLECTOR. PULL THE STRAPS TIGHT ON BOTH SIDE AND YOU ARE READY TO GO.

