



We have our video install guides on our website and on youtube.com. Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

Mustang 2015 to 2028 Love The Drive Wind Deflector Install Guide

This wind deflector is designed to fit in a 2015 to 2028 Mustang convertible. No modifications to your convertible are needed. The wind deflector is designed to go in and out of your convertible in under 30 seconds. The wind deflector can stay in your convertible with the top up or down.

Your wind deflector is held in place using four brackets and four straps.



The front brackets slide into the seat belt slots in the rear trim panel. All the brackets are coated in a soft vinyl so it will not mark your Mustang



The rear brackets sit on the trim panel in your back seat. The brackets are designed to be used with your boot cover if you choose to.



Start by lowering your top. Then lower the wind deflector into the rear seat area. Slide the front brackets into the seat belt slots and let the rear bracket sit on the trim panel.



There are 4 straps that hold the wind deflector in place. Two straps use the child anchor system and two attached to the bottom of the trim panel



The black snap hook straps slide into the holes in the rear seats. They will lock into the child anchor system. Then buckle to the strap into the wind deflector.



The silver hook straps hook into the cutout on the bottom of the trim panel and then buckle into the bottom of the wind deflector.



The front brackets have two thumbscrews to allow the front brackets to turn down for storage in the trunk.




To store the wind deflector in the trunk remove the thumbscrews from the front brackets, then turn the bracket down. Then replace the thumbscrews. Store in the storage bag




If you have any questions or comments please call 1-855-457-5683 or email information@lovethedrive.com at www.lovethedrive.com

Install Guide For Mustang Front bracket Updated

Your wind deflector front brackets are stored in the down position for shipment.

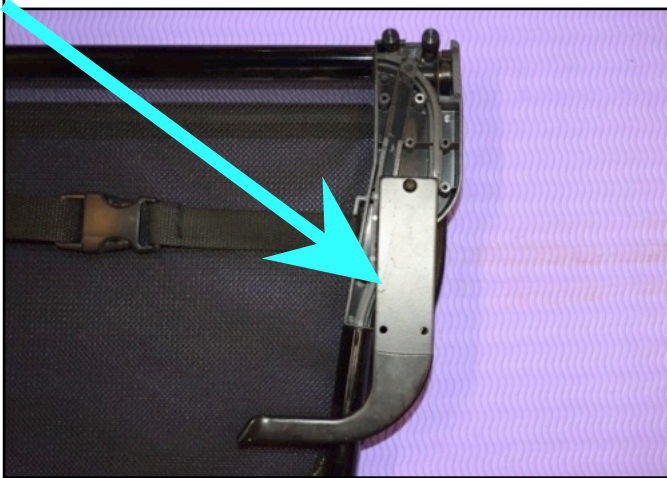

There are two thumbscrews installed at the top of large plastic

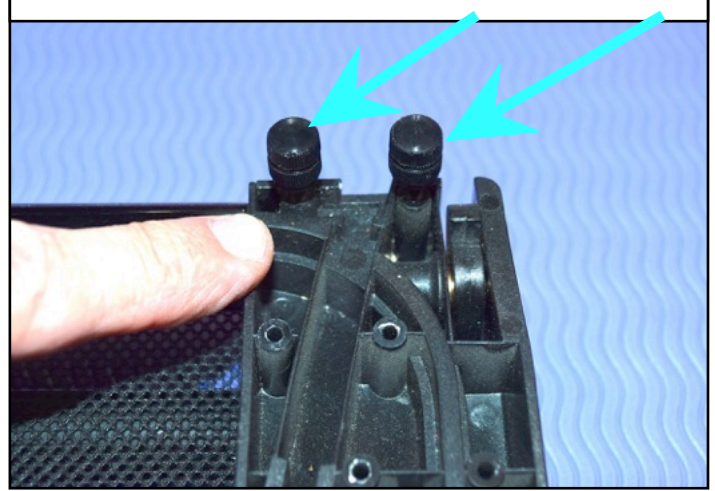

Remove both of these thumbscrews




Turn the front bracket up to the top of the wind deflector




Turn the front bracket up to the top of the wind deflector



Insert the screws into the holes

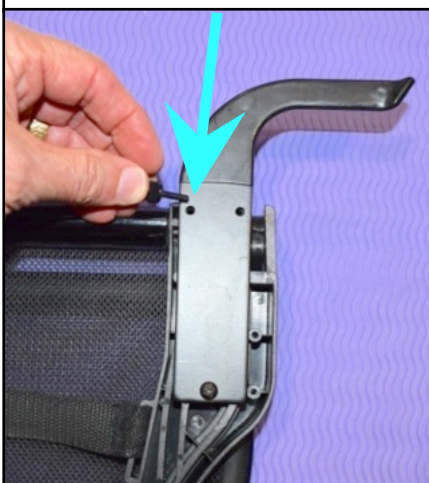

Tighten both thumbscrews

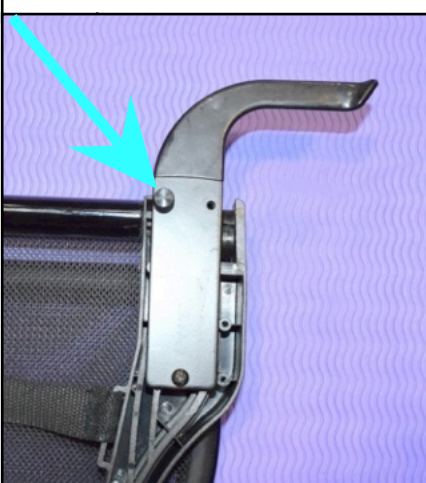

Repeat the process on the other bracket

