



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 info@lovethedrive.com

Mercedes (208) 1997 to 2003 CLK 200, 230, 320, 430, 55 Love The Drive Wind Deflector Install Guide

- * You can raise and lower your convertible top with the wind deflector installed.
- * The wind deflector will fit in the trunk when not in use.
- * Start by lowering your top and moving the front seats all the way forward.

Your wind deflector attaches to your convertible using four brackets. Two in the front and two in the rear.



Start by lowering the wind deflector into the rear seat area. The front brackets rest on the side trim panel. The rear brackets will go into the holes where the back seat belts come out of.



The rear brackets will rest on the seatbelts when you first put the wind deflector into the backseat.



Lift the seatbelt up and allow the rear bracket to hook on to the trim panel. Release the seatbelt and it will cover the rear bracket. repeat on the other side.



There are two straps on the bottom of the wind deflector that attach to the bottom of the trim panel.



Attach the silver hook to the trim panel beside the bottom on the rear seat. Pull the strap snug, it does not have to be tight. You are now done, flip the top panel of the wind deflector up and enjoy!



When not in use the wind deflector can be stored in the trunk. You will need to loosen the thumbscrews on the front brackets.



Then flip the brackets around and loosely tighten the thumbscrews. Do NOT tighten the screws so much as to push the bracket into the mesh. Only loosely tighten the thumbscrews.





We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 info@lovethedrive.com

Mercedes (208) 1997 to 2003 CLK 200, 230, 320, 430, 55 Love The Drive Wind Deflector Install Guide

- * You can raise and lower your convertible top with the wind deflector installed.
- * The wind deflector will fit in the trunk when not in use.
- * Start by lowering your top and moving the front seats all the way forward.

Your wind deflector attaches to your convertible using four brackets. Two in the front and two in the rear.



Start by lowering the wind deflector into the rear seat area. The front brackets rest on the side trim panel. The rear brackets will go into the holes where the back seat belts come out of.



The rear brackets will rest on the seatbelts when you first put the wind deflector into the backseat.



Lift the seatbelt up and allow the rear bracket to hook on to the trim panel. Release the seatbelt and it will cover the rear bracket. repeat on the other side.




There are two straps on the bottom of the wind deflector that attach to the bottom of the trim panel.



Attach the silver hook to the trim panel beside the bottom on the rear seat. Pull the strap snug, it does not have to be tight. You are now done, flip the top panel of the wind deflector up and enjoy!



When not in use the wind deflector can be stored in the trunk. You will need to loosen the thumbscrews on the front brackets.

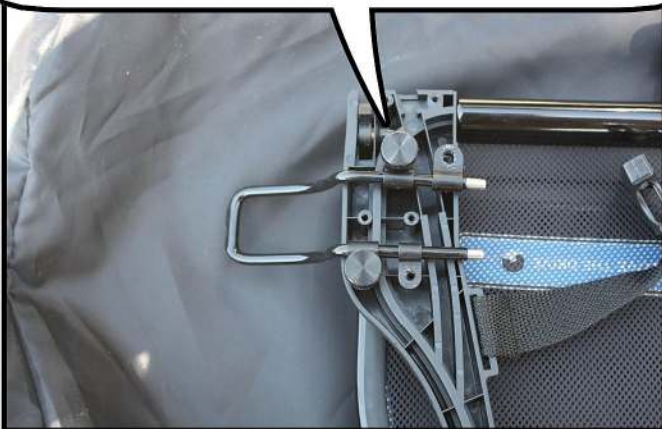

Then flip the brackets around and loosely tighten the thumbscrews. Do NOT tighten the screws so much as to push the bracket into the mesh. Only loosely tighten the thumbscrews.

