



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 [information@lovethedrive.com](mailto:information@lovethedrive.com)

# Mercedes 300E & E320 (MB 124) 1992 to 1995 Love The Drive Wind Deflector Install Guide

For shipping purposes, we had to turn the front brackets inwards so the wind deflector would fit into the box. You will need a Philips (star) screwdriver to remove the screws and rotate the front brackets 180 degrees. The bottom photo shows the correct position.



Your Mercedes was designed for a wind deflector. There is a space just below the back seat belts for the rear bracket to sit on.



The first step is to stand outside your car beside the back seat and lower the wind deflector into the back seat area. Insert the rear bracket in the space below the seat belt on the opposite side you are standing. Then insert the rear bracket on the side closest to you.




The two brackets should sit flat on the trim panel and not interfere with the rear seat belts.



The front brackets of the wind deflector will rest on top of the side trim panel.



Next attach the silver hook straps to the bottom of the trim panel on either side of the back seats.

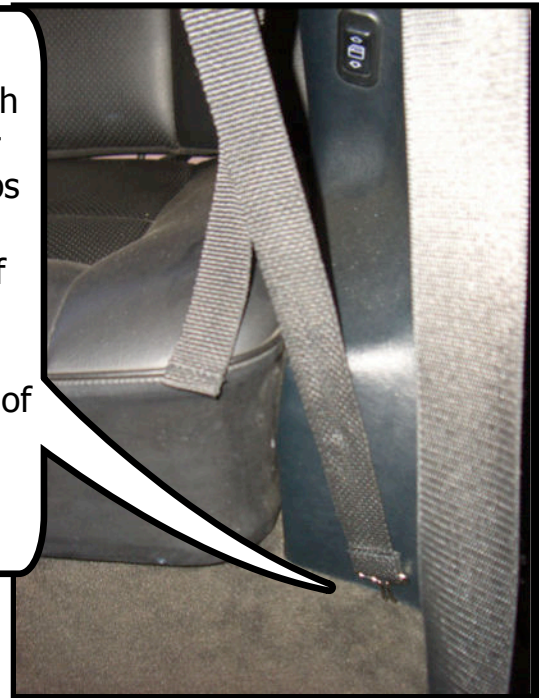

Then attach the two straps to the wind deflector and adjust the straps so they are not loose.



Flip the top panel up and you are now ready to Love The Drive. When not in use, the wind deflector can be stored in the trunk. Please use the included storage bag.

