



We have our video install guides on our website and on youtube.com
Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

Nissan Murano Crosscab 2011 to 2014

Love The Drive Wind Deflector


Install Guide

THIS WIND DEFLECTOR FOR YOUR MURANO CROSSCAB IS DESIGNED TO GO IN AND OUT OF YOUR MURANO IN UNDER 30 SECONDS AND REQUIRES NO MODIFICATION TO YOUR MURANO. THE WIND DEFLECTOR CAN STAY IN PLACE WITH THE TOP IS UP OR DOWN.

Your wind deflector attaches to your Murano using 4 brackets. The two front brackets sit on the side trim panels. The two brackets slide into your rear seatbelt slots.




Start by lowering your top and sliding one of the front seats forward. Next align the rear brackets with the slots for the rear seatbelts. Then slide the brackets into the slots.

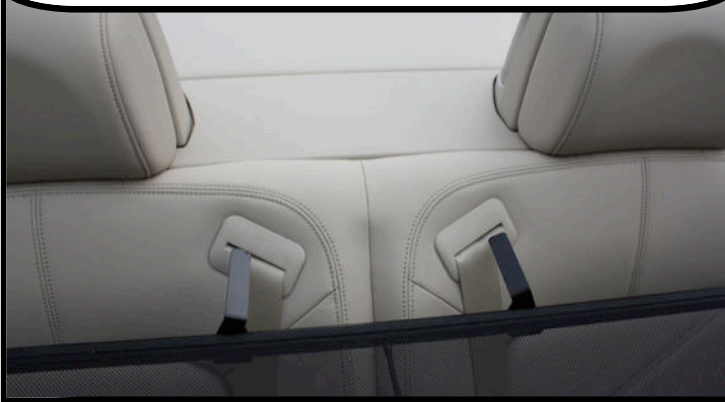

The wind deflector will now rest in your back seat



The wind deflector comes with two straps. Attach the two straps with black snap hooks to the Child Anchor system. The Anchors are located at the bottom of your rear seat. Look for two round circles. Slide the hooks in, with the hook facing down, they will lock into place with a snap

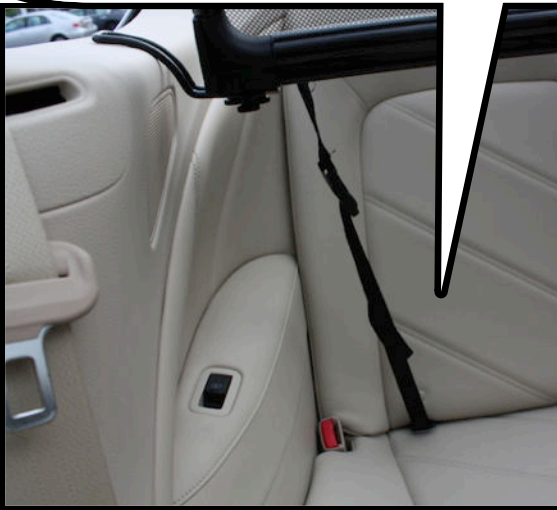

When you need to use your back seat you can put the wind deflector in the trunk. You will need to turn the front brackets so they face in. Loosen the thumbscrews. Turn the bracket around then to insert the screws back into the holes. DO NOT turn them tight



Once the front brackets are turned around. Your wind deflector will store in the trunk, when you need to use the back seat. Please use storage bag provided



When we shipped your wind deflector the rear brackets were removed you. We have labeled the brackets Drivers Side and Passenger side. The 4 screws can be installed with a philips (star) Screwdriver. Once installed you can remove the labels. You will only have to do this once and do NOT have to do this to store in the trunk.

